

Windows 10 Home OS Installation:


DownloadFiles:

<https://drive.google.com/open?id=16yQ0e6luTcU3R5YPpFQ25BAKJVlcb4Ut>


1. Format the USB flash drive into NTFS format and name it: WINPE.
2. Copy all the files in the image file to the root directory of the USB disk.

名称	大小	压缩后大小
..		
Boot		
EFI		
Images		
Scripts		
sources		
bootmgr	407,582	381,119
bootmgr.efi	1,257,376	645,514


3. Connect the USB flash drive and keyboard to the device.
4. Restart the system or boot process, press the F7 key of the keyboard, select USB disk in the Boot Menu interface that appears, press Enter, the system will automatically refresh.

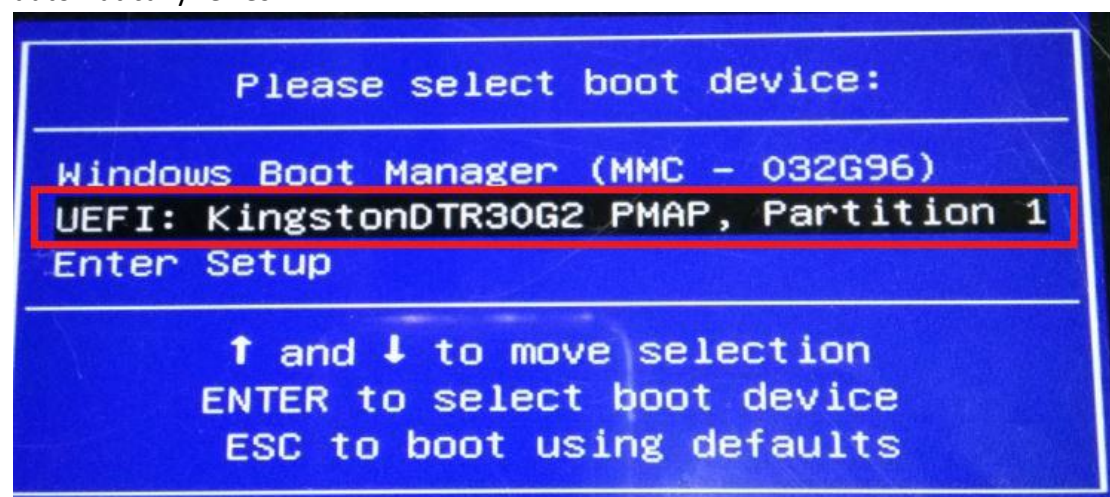

5. After the system refresh is finished, pull out the USB disk and type EXIT at once, the device will automatically restart.

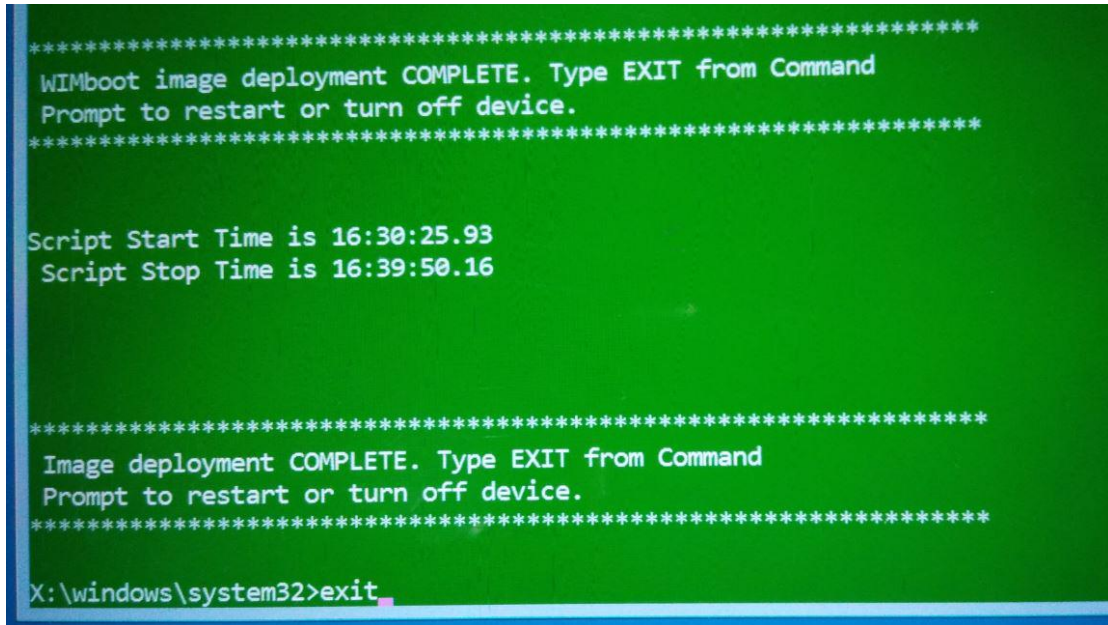

6. After entering the system desktop, double-click the script of the desktop: **Cleanup.bat** (Note: ignore the pop-up window on the screen, DO NOT click OK or Cancel).

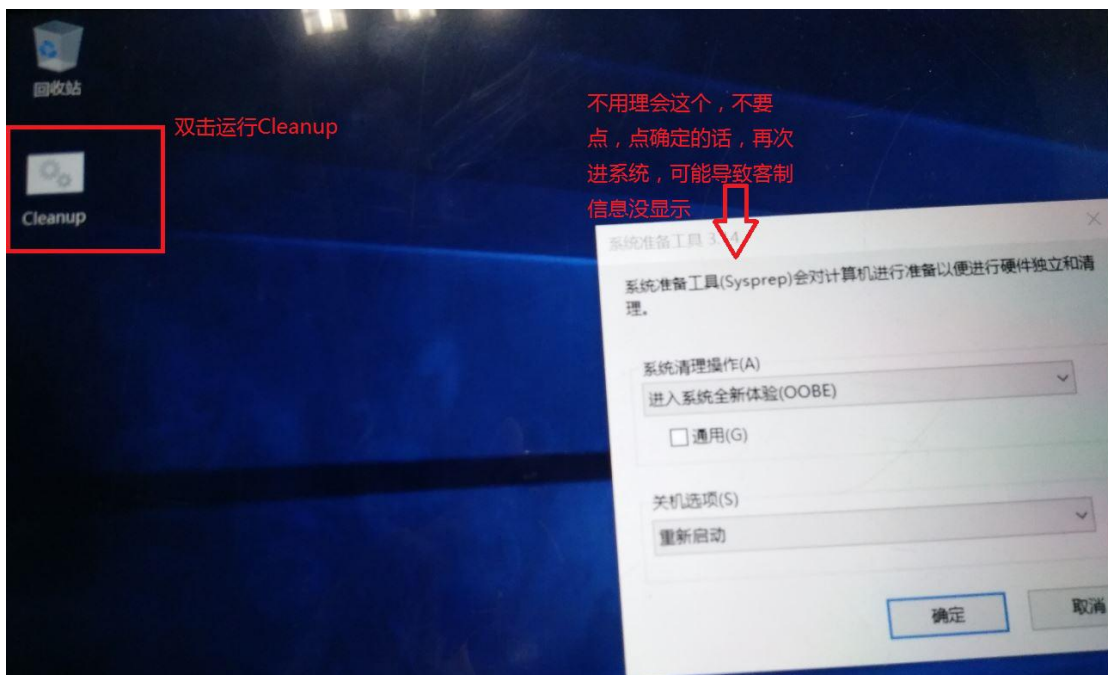

7. Then the device will turn off and restart, with Cortana guiding you to set the device up.